

# users

## **i**max

Your Ideal users guide

**W45, W60 & W80**  
**W45P, W60P & W80P**


When replacing any part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require. Do not use reconditioned or copy parts that have not been clearly authorised by Ideal Boilers.

**i** BOILERS *Ideal*  
**ENGINEERED FOR PEACE OF MIND**

## **imax** (Natural Gas and LPG)

PI No. 0063 BN 3218

Destination Countries: GB, IE

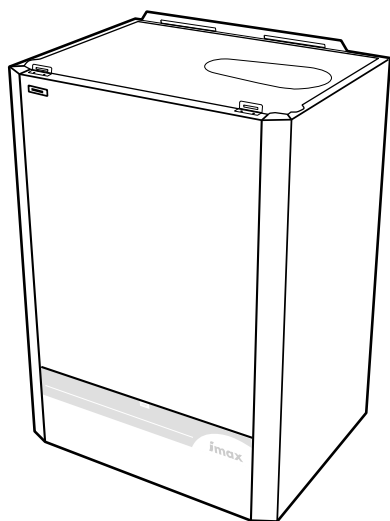

### **Introduction**

The **imax** is a wall mounted, room sealed, super efficient condensing boiler featuring full sequence automatic spark ignition and fan assisted combustion.

Due to the very high efficiency, condensate is produced from the flue gases and this is drained to a suitable disposal point through the plastic waste pipe at the bottom of the boiler. A condensate 'plume' will also often be visible at the flue terminal.

### **Safety**

#### **Current Gas Safety (Installation & Use) Regulations or rules in force.**

In your own interest, and that of safety, it is the law that this boiler must be installed and maintained by a CORGI registered installer or in IE a competent person, in accordance with the above regulations.

The appliance should be serviced at least once a year by a CORGI registered installer or in IE a competent person.

*It is essential that the instructions in this booklet are strictly followed, for safe and economical operation of the boiler.*

### **Electricity Supply**

The appliance must be earthed.

Supply 230 V - 50 Hz. The fusing should be 3A.

This appliance is intended to be connected to the supply via a double-pole switch, having a 3mm contact separation in both poles, serving only the boiler and system controls. Alternatively, a 3-pin UNSWITCHED socket may be used.

### **Important Notes**

- This appliance must not be operated without the casing correctly fitted and forming an adequate seal.
- If the boiler is installed in a compartment then the compartment **MUST NOT** be used for storage purposes.
- Do not store objects around or on the boiler, and keep access clear at all times.
- Do not obstruct ventilation ducts, grilles or openings in the boiler room, room space or compartment that the appliance is installed in, or the passage of combustion and ventilation to the boiler.
- Do not turn off the boiler if it is to be left unattended in frosty weather.
- If it is known or suspected that a fault exists on the boiler then it **MUST NOT BE USED** until the fault has been corrected by a CORGI registered installer or in IE a competent person.
- Flammable materials must not be placed in close proximity to the appliance. Materials giving off flammable vapours must not be stored in the same room as the appliance.

In cases of repeated or continuous shutdown a CORGI registered installer or in IE a competent person should be called to investigate and rectify the condition causing this and carry out an operational test after each intervention on the device. Only the manufacturers original parts should be used for replacement.

### **Minimum Clearances**

Clearances of **300mm (12")** below, **50mm (2")** at the sides and **450mm (17 3/4")** at the front of the boiler casing must be allowed for servicing.

### **To light the boiler (Refer to Frame 1)**


1. CHECK THAT THE ELECTRICITY SUPPLY TO THE BOILER IS OFF.
2. Set the burner on/off switch (A) to off.
3. Switch on the electricity supply to the boiler and check that all external controls, e.g. programmer, room thermostat, etc are on. Allow the boiler to carry out a self check.
4. Set the burner on/off switch (A) to ON.

The boiler will commence the ignition sequence, supplying heat to the system when required.

All CORGI Registered Installers carry a CORGI ID card, and have a registration number. Both should be recorded in your Log Book. You can check your installer by calling CORGI direct on 0156 372 300.

**CAUTION. To avoid the possibility of injury during the installation, servicing or cleaning of this appliance care should be taken when handling edges of sheet steel components.**

# 1 BOILER CONTROLS / DISPLAY

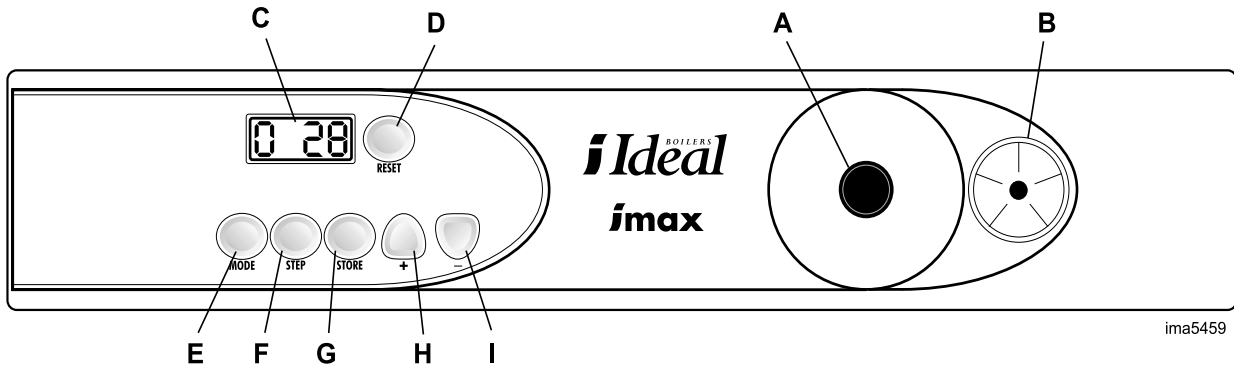

ima5459

- A. Burner switch
- B. Pressure gauge
- C. Display
- D. Reset button
- E. Mode button
- F. Step button
- G. Store button
- H. + button (to increase values)
- I. - button (to decrease values)

## Operation

Sequence	Boiler Status
A	DHW valve energised
0	Standby, no heat request
1	Pre-purge, post purge
2	Ignition
3	Burner on in CH mode
4	Burner on in DHW mode
5	Waiting for air pressure switch to open or close
6	Burner off because a set value has been reached
7	Pump overrun in CH mode
8	Pump overrun in DHW mode

In normal operation the display (C) shows the boiler status (see table above) and the water system flow temperature.

### Blocking Mode

The boiler will enter blocking mode under certain fault conditions. Whilst in blocking mode the burner is switched off. Once the fault conditions are clear the boiler will automatically reset itself. In blocking mode the display will alternate between showing a '9' in digit one, along with the flow temperature in digits 2, 3 and 4 e.g.

9 96

Followed by the blocking code 'bxx'.

6 18

### Error Mode

In error mode the display will flash on and off with the error code shown.

E 36

The boiler will enter error mode under certain fault conditions. The unit will be inoperative until the fault is rectified. The reset button is used to reset the boiler control module after an error has occurred.

### Self Check and Anti-Seize Modes

After switching on the mains power or after a reset, the boiler performs a selfcheck. i.e. the DHW valve (if connected) is energised and the pump is switched on for 10 seconds. This cycle repeats itself every 24hrs, as long as no heat request is given in 24hrs.

### Burner on/off Switch

With the burner switch set to 'off' the boiler will not respond to a heat demand. However the pump anti-seize and frost protection modes are still operational and could possibly cause the boiler to fire. Note. The burner switch is NOT a mains isolation switch.

### CH/DHW Systems

In standby mode pressing and holding the '+' button turns the CH system on/off.

In standby mode pressing and holding the '-' button turns the DHW system on/off.


## 2 CONTROL OF WATER TEMPERATURE AND SYSTEM TYPES

The water temperatures and system types are factory preset but may be adjusted. The following settings can be changed.





1.	DHW Temperature (optional)
2.	DHW System
3.	CH System
4.	Flow Temperature

Parameter settings and limits are listed below.

Parameter mode is entered from standby mode by pressing the 'mode' button once.

Press	Display
	PARA

Press the 'step' button until the desired parameter is displayed.

Press	Display	Description	Lower Limit	Upper Limit	Factory Setting
	1. 60	<b>DHW Temperature (Optional) °C</b> Instant water heater Storage Tank	40 20	65 70	60
	2. 01	<b>DHW System</b> 00 = Off 01 = On 02 = Off + pump continuous 03 = On + pump continuous			01
	3. 01	<b>CH System</b> 00 = Off 01 = On 02 = Off + pump continuous 03 = On + pump continuous			01
	4. 82	<b>CH Flow Temperature °C</b>	20	90	82

Press the '+' or '-' buttons to change the values.

The parameter setting can be stored by pressing and releasing the 'store' button, the new setting flashes twice to show it has been accepted. The new setting will become active when the 'mode' button is pressed or if the display is left. If the display is left, after 20 minutes it automatically returns to 'standby' mode.

## ***To shut Down the Boiler***

### **1. For short periods**

Set the burner on/off switch (A) to Off.

### **2. For longer periods**

Set the burner on/off switch (A) to OFF. Switch the electricity supply to OFF. For longer periods the entire system should be drained, including the domestic hot water supply.

## ***To Relight the Boiler***

Refill the system if it has been drained, taking care to ensure no air is in the boiler or system.

Repeat the procedure detailed in 'To light the boiler'.

## ***Frost Protection***

The **imax** boiler has built into its control system the facility to protect the boiler only against freezing.

### **Note.**

This may not protect remote parts of the system, in which case a separate frost thermostat should be fitted.

## ***Boiler Overheat Thermostat***

Boiler overheating is detected by electrical sensors connected to the boiler control module. If the boiler overheats it will shut down and the display will show E18. Press the reset button (D) and the boiler will relight. If the fault recurs turn off the boiler and consult a CORGI registered installer or in IE a competent person.

## ***Condensate Drain***

The condensate drain must not be modified or blocked.

Blockage of the condensate drain, caused by debris or freezing, can cause automatic shutdown of the boiler or leakage from the condensate trap mounted on the bottom of the boiler.

If freezing is suspected and the pipe run is accessible an attempt may be made to free the obstruction by pouring hot water over the exposed pipe and clearing any blockage from the end of the pipe. If this fails to remedy the problem the assistance of a CORGI registered installer or in IE a competent person should be sought.

## ***Escape of Gas***

Should a gas leak or fault be suspected contact your local gas supplier without delay.

Do NOT search for gas leaks with a naked flame.

## ***Cleaning***

For normal cleaning simply dust with a dry cloth.

To remove stubborn marks and stains use a damp cloth and mild detergent.

DO NOT use abrasive cleaning materials.

## NOTES

## NOTES

**Caradon Ideal Ltd.**  
P.O. Box 103, National Ave, Kingston  
upon Hull, HU5 4JN. Telephone:  
01482 492 251 Fax: 01482 448 858.  
Registration No. London 322 137.

Caradon Ideal Ltd. pursues a  
policy of continuing  
improvement in the design and  
performance of its products.  
The right is therefore reserved  
to vary specification without  
notice.

***i* Ideal** BOILERS  
**ENGINEERED FOR PEACE OF MIND**

March 2003



UIN 158 638 A02

**Caradon**  
Ideal Limited

***Ideal Consumer Helpline Tel: 01482 498 376***

***www.idealboilers.com***